

# SL-SDL-G2 SOLAR DISPLAY LIGHT

## INSTALLATION AND USERS GUIDE



### PRIOR TO INSTALLATION, PLEASE READ THE ENTIRE INSTALLATION INSTRUCTIONS

#### WARNINGS

THIS LIGHT SHOULD BE INSTALLED BY A QUALIFIED PROFESSIONAL. INSTALLER RESPONSIBLE TO ENSURE SAFE INSTALLATION, PROPER MAINTENANCE AND SAFETY CHECKS. NOT FOR EMERGENCY LIGHTING. NOT FOR USE IN ENVIRONMENTS WHERE EXPLOSIVE OR CORROSIVE GASES ARE PRESENT. NO USER SERVICABLE PARTS INSIDE FIXTURE. DO NOT DIS-ASSEMBLE OR MODIFY THE FIXTURE IN ANY WAY.

#### NOTES

THIS SOLAR FIXTURE COMES WITH A 3 YEAR WARRANTY AGAINST MANUFACTURING DEFECTS. THIS WARRANTY DOES NOT COVER PHYSICAL DAMAGE, WEAR AND TEAR OR IMPROPER OPERATION. WARRANTY DOES NOT COVER NORMAL BATTERY PERFORMANCE LOSS OVER TIME. SOLAR FIXTURE PERFORMANCE IS HEAVILY INFLUENCED BY THE ENVIRONMENT. SUNLIGHT LEVEL, EXTREME TEMPERATURES, SNOW, DIRT, AND OTHER FACTORS WILL AFFECT PERFORMANCE.



## INSTALLATION REQUIREMENTS

MODEL	INSTALLATION	OPERATING TEMPERATURE	LUMEN OUTPUT	ORIENTATION
SL-SDL-4FT-40K-BK-G2 SL-SDL-2FT-40K-BK-G2	SURFACE MOUNT INSTALLATION	-4F to 140F  Battery Charging Temp: 32F – 113F	2000 / 500 750 / 185	TYPICALLY INSTALLED WITH LED FACING DOWN, SOLAR PANEL INCLINED TOWARDS THE SUN.

## INSTALLATION INSTRUCTIONS

### Pre-Installation Notes:


- 1) Select a site that gets direct sunlight and is not blocked by trees, buildings, structures etc.
- 2) Confirm that no light sources will shine on the solar panel during the night-time hours. The solar panel functions like a photo-cell. If there is light on the solar panel, the LED lights will not come on.
- 3) Ensure that the light is in an area where there is no chance of physical damage, excess water flow or flooding.
- 4) The light needs 1-2 days to get on the proper charge/discharge cycle. Do not expect the best performance the first nights that the light is in operation.

### Installation:

- 1) Align and mount the brackets to the wall either with the provided screws and anchors or other appropriate hardware. In some cases, it may be necessary to pre-drill or use alternate fasteners.
- 2) Place the light between the brackets and install the side screws to secure the light to the brackets.
- 3) Turn the light on by pressing the silver button. Please note that the light will not operate or charge unless the light is turned on.
- 4) The light will start operation at dusk, running 4 hours at full output and then the rest of the night at 25% output.
- 5) It may take several days for the light to operate consistently.

## CONTENTS

- LIGHT FIXTURE
- 2 MOUNTING BRACKETS
- MOUNTING SCREWS
- INSTALLATION GUIDE

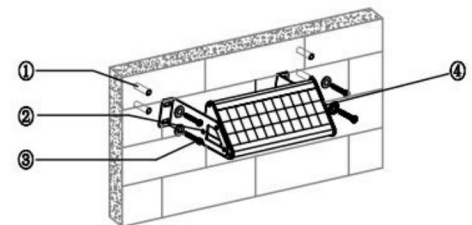

1. Anchors
2. Brackets
3. Screws with Washers
4. Light Fixture

